

CUT SLOT FOR VERT INSTALL



FUSELAGE UPPER

LWR HORZ. INTAKE
MAKE 2 EA.

TURTLEDECK SIDE
MAKE 2 EA.

TURTLEDECK TOP

BACKBONE

CANOPY
LAMINATE 12 PCS. OF BLUECORE

LWR VERTICLE STAB SUPPORT MAKE 2 EA.

FWD FUSELAGE BOTTOM

CUT 2 EA. STRIPS approx. 0.4 - 0.5 in. AND LAMINATE
1/16 PLY
FWD STRAKE LOCATION
FWD FUSELAGE MAKE 2 EA.
CUT 2 EA. STRIPS approx. 0.4 - 0.5 in. AND LAMINATE

UPPER RIB SIDE

WING STRIPS

FWD STRAKE
MAKE 2 EA.

CANARD
MAKE 2 EA.
.157 CF TUBE

PLACE A SMALL SHEET OF 3MM DEPRON OR 1/16 Balsa BETWEEN THE TWO FUSELAGE UPPER INTAKE SPIKES BEFORE ATTACHING THE FWD FUSELAGE

SIDE VIEW

AFT FUSELAGE MAKE 2 EA.

CUT 2 EA. STRIPS approx. 0.4 - 0.5 in. AND LAMINATE


AFT STRAKE LOCATION

CUT 2 EA. STRIPS approx. 0.4 - 0.5 in. AND LAMINATE

NOSE CONE TOP
LAMINATE 11 PCS. BLUECORE

NOSE CONE SIDE

LOWER FUSELAGE

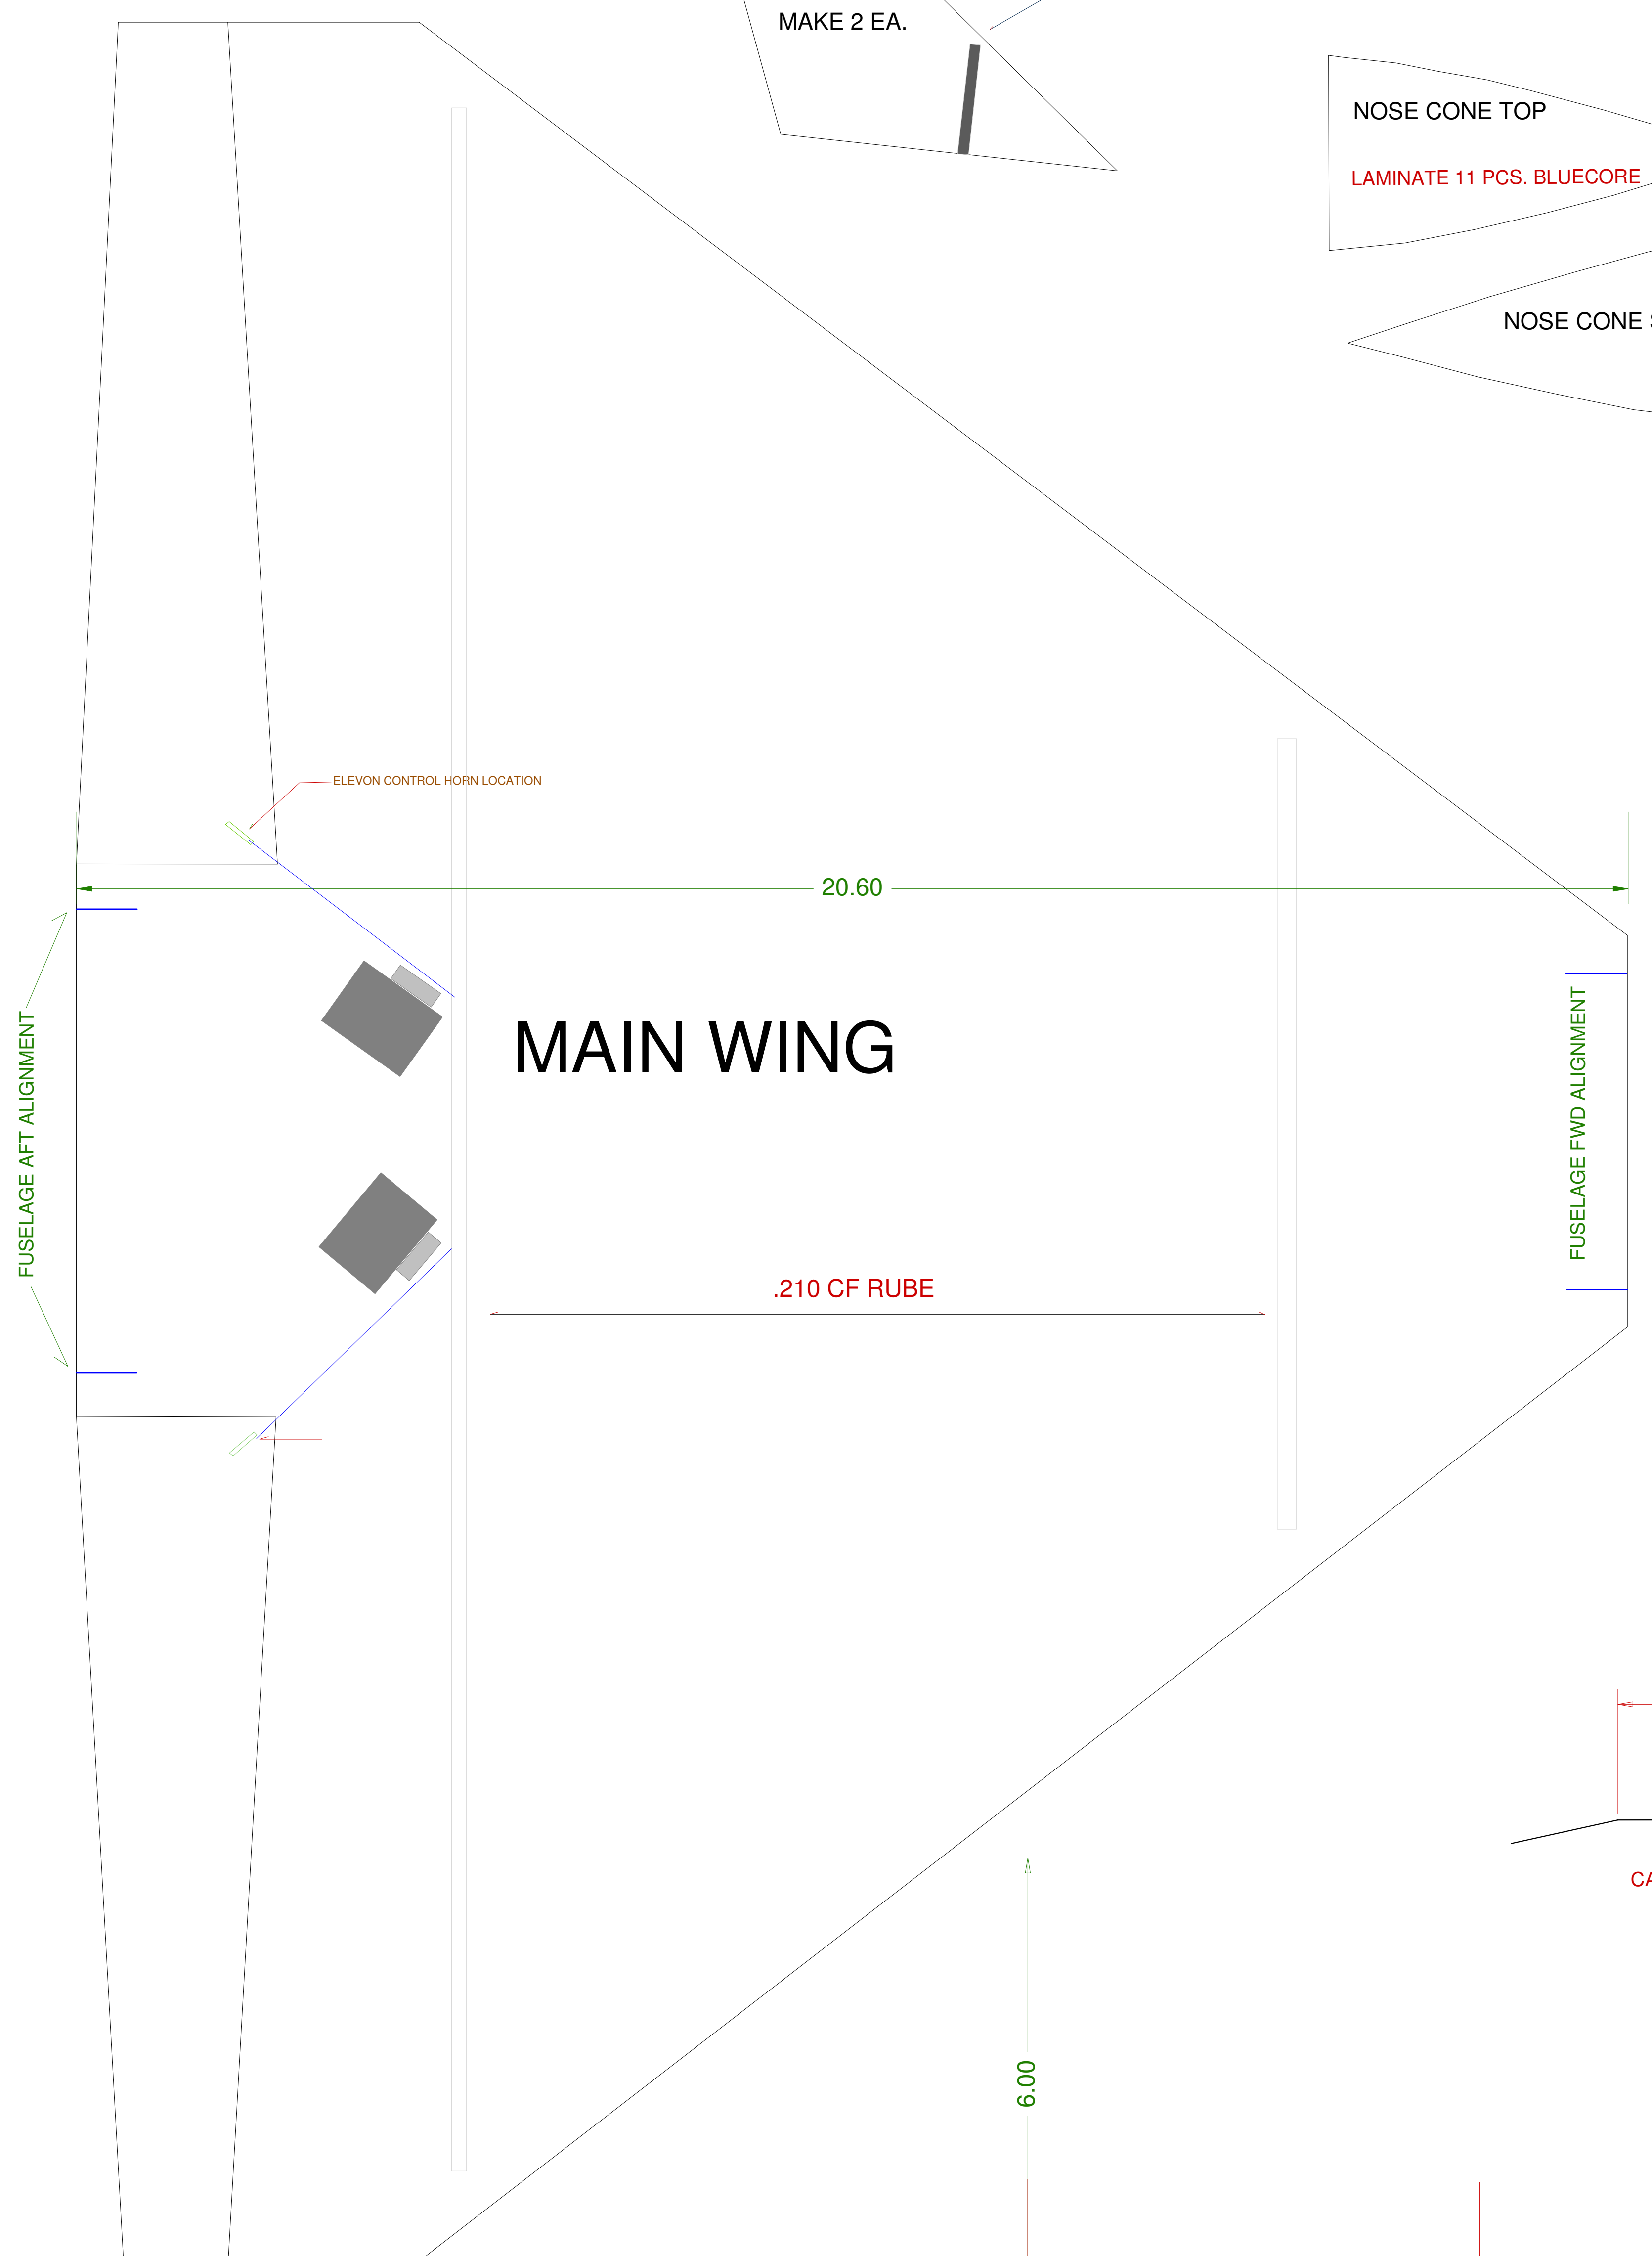

MAIN WING

20.60

.210 CF RUBE

FUSELAGE FWD ALIGNMENT

FUSELAGE AFT ALIGNMENT

ELEVON CONTROL HORN LOCATION

6.00

6.00

2.87

1.45

CANARD ANGLE


7°

VERTICLE STAB

ENGINE MOUNT

3/8 SQUARE HARDWOOD 4.5 IN.

FWD FUSE



AFT

FWD BULKHEAD